

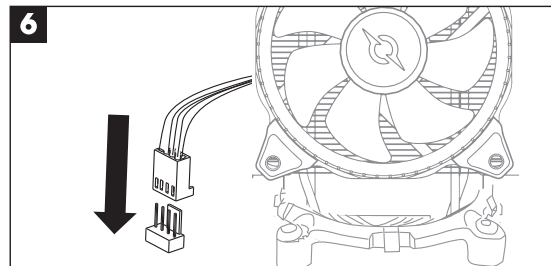
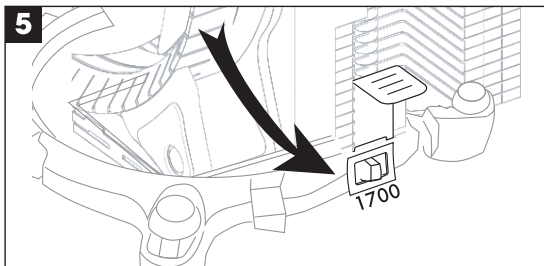
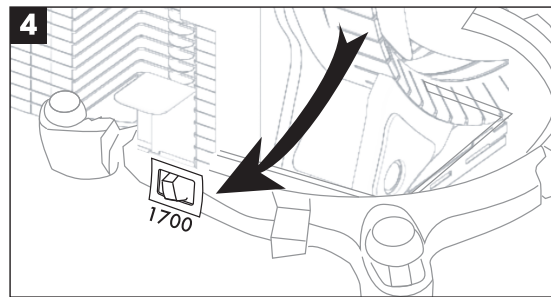
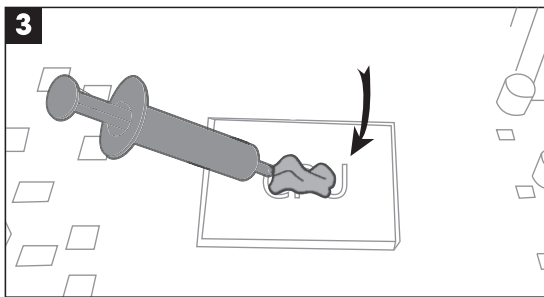


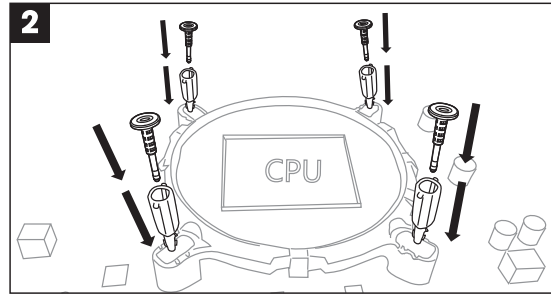

Instalarea - INTEL (1700)

Installation - INTEL (1700)

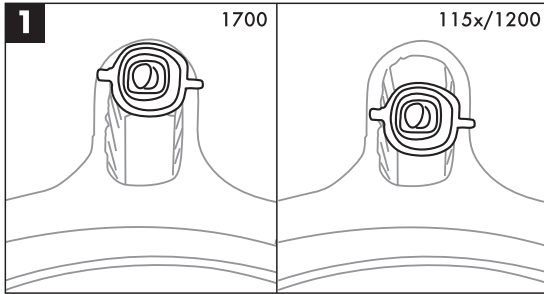

RO 6 Conectati cablul 4-pini PWM al ventilatorului la conectorul CPU_FAN de pe placa de baza.

EN 6 Connect the 4-pin PWM cable of the fan to the CPU_FAN connector on the motherboard.